

TINKER & RASOR

P.O. Box 281
San Gabriel, CA 91778-0281
Tel 626-287-5259 / Fax 626-287-0132

MODEL DL-1 v. 2.0

User Manual

Unpacking Checklist

The Model DL-1 Data Logger Kit includes the following:

- | | |
|---|---|
| <input type="checkbox"/> Model DL-1 Logging Unit | <input type="checkbox"/> 6A Half Cell Reference Electrode |
| <input type="checkbox"/> TRAC Configuration & Analysis Software CD | <input type="checkbox"/> Carrying Case |
| <input type="checkbox"/> 9-pin Communications Cable | <input type="checkbox"/> 9-Volt Battery |
| <input type="checkbox"/> 4-Channel Sampling Interface Cable | <input type="checkbox"/> Warranty Registration Card |

-
- Handspring™ PDA Cable (Optional Accessory)
-

The information contained in this document is subject to change without notice and does not represent a commitment on the part of Tinker & Rasor.

All listed trademarks and trade names are the property of their respective owners.

Any and all reproduction or transmission of any part of this manual, in any form or by any means and for any purpose other than the personal use by the purchaser is strictly forbidden without the express written authorization of Tinker & Rasor.

This manual contains User Information for the Tinker & Rasor Model DL-1 and the Tinker & Rasor TRAC software package, version 2.

For software updates, please visit our website:
<http://www.tinker-rasor.com/software>

© 2003 Tinker and Rasor, Inc.
All rights reserved.

Model DL-1 v2.0

Table of Contents

1.0 Computer Software Setup	1
1.1 Computer System Requirements.....	1
1.2 Software Installation.....	1
1.3 Communication Setup	1
2.0 Quick Start	2
2.1 Quickstart Introduction.....	2
2.2 Quickstart Operation Diagram.....	2
3.0 Feature Summary	5
3.1 Operation Overview	6
3.2 Creating A Configuration Document.....	8
3.2.1 Setting Up the Configuration	8
3.2.2 Recommended Procedure.....	9
3.2.3 Channel Selections.....	9
3.2.4 Sequence Parameters.....	9
3.2.5 Status Section, Configuration Window	10
3.2.6 Notes & Advanced Options.....	10
3.3 Communication	10
3.3.1 Send Configuration	11
3.3.2 Receive Data	11
3.4 Hardware Setup and Use Overview.....	11
3.4.1 Connecting the Sampling Interface Cable	11
3.4.2 Data Logger Panel.....	12
3.4.3 Power Supply	12
3.4.4 Start/Stop.....	12
3.5 View Data - Spreadsheet	12
3.6 View Data - Graph.....	13
4.0 Feature Details	14
4.1 Status Window	14
4.2 Configuration Options	16
4.3 Scaling Inputs & Data	17
4.3.1 Channel Details.....	17
4.3.2 Sensors & Scaling Methods	17
4.4 Triggering, Event-based Recording.....	19
4.5 Spreadsheet View Features.....	20
4.5.1 Scaling Spreadsheet Data.....	20
4.5.2 Spreadsheet Statistics	20
4.5.3 Printing Spreadsheet Data	20
4.5.4 Exporting Spreadsheet Data	20
4.6 Graph View Features	21
4.6.1 Scaling Graph Data	21
4.6.2 Graph Statistics	22
4.6.3 Printing Graphs	22
4.6.4 Exporting Graphs	22
4.6.5 Formatting Graphs	23
5.0 DL-1 Data Logger Unit Operation	23
Appendix A: Technical Information	25
Appendix B: Recording and Data Transfer Connections	27
Appendix C: Example of Standard Connection	28
Appendix D: Technical Support Resources	29
Index	30