



### OPERATION PROCEDURES (SEE INSTRUCTION MANUAL FOR DETAILS)

1. Insert red cable connector into front receptacle of instrument.
2. Attach clamps to test station leads. Polarity does not matter.
3. Press red "POWER" button - Instrument is now ON.
4. Press black "START" button - Instrument will begin test.
5. Instrument test cycle will last approximately 20 seconds.
6. Display will indicate insulator condition. "Good" or "Short". "Open" indicates one or both of the leads are not attached to the pipe.
7. Press red "POWER" button again to turn instrument OFF.
8. Operation is same when used for pipe to casing tests.

**TINKER & RASOR**  
www.tinker-rasor.com

TINKER & RASOR  
\*READY\*

**START** **POWER**

www.tinker-rasor.com

**BATTERY ACCESS**  
REMOVE 4 OUTSIDE SCREWS  
LIFT OFF PANEL

