INKER & RASOR

SURVEY CANES QUICK START GUIDE



Handle & Reel Install

- 1. Loosen the clamp by unscrewing the **red thumb screw**.
- 2. Position the clamp around the blue carbon fiber tube.
- 3. Ensure the **washer** is placed on the **outside of the clamp** for proper alignment and secure fit.
- 4. Tighten the red thumb screw until the clamp is firmly secured to the tube.
- 5. Use the **reel drag** to adjust tension on the wire as needed.






REEL DRAG

RBC - Universal 1.5" Ball Mount Cane

Cane is compatible with any 1.5" ball tablet mount. Tablet mounts sold separately









CAUTION! CONNECTION

DO NOT USE THIS PRODUCT IN A HIGH-VOLTAGE ENVIRONMENT

Website: www.tinker-rasor.com Phone: (830) 253-5621 E-mail: info@tinker-rasor.com December 2025

INKER & RASOR

RDC & RMC QUICK START GUIDE

Tablet Mount Install Steps

Before installing tablet mount onto Survey Cane, check ball mount screws on back side of tablet mount to ensure they have not loosened during shipping.

- 1. Loosen the dual arm socket using the knob located on the side.
- 2. **Note:** If using Survey Tablet Cane, the black knob on the dual arm socket must be positioned on left side of the cane so it is opposite of the DVM mount.
- 3. Insert the 1.5" ball into the dual arm socket and tighten until secure.
- 4. Slightly loosen the dual arm socket to adjust the tablet mount into the desired position. The tablet mount can be positioned in multiple orientations to achieve optimal comfort and weight balance.








Tablet Install Steps

- 1. Adjust the tablet side supports to the desired position using the Phillips screw located on the back of the tablet mount.
- 2. Squeeze the flat rubber grips to move the supports out of the way.
- 3. While holding the grips compressed, place the tablet onto the mount. Release the grips to allow them to compress securely around the tablet.
- 4. Ensure the tablet is firmly secured before use.

Optional DVM Mount Install

DVM Mount Not Included with Data Cane

- 1. Flip the tablet bracket to the back side.
- 2. Align the holes of the DVM plate with the ball mounting plate.
- 3. Install the DVM mount facing upwards and on the opposite side of the flat rubber grips.

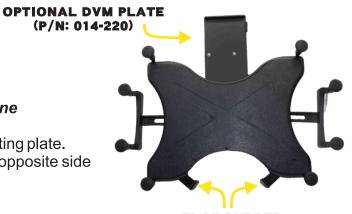

FLAT RUBBER GRIPS

DO NOT USE THIS PRODUCT IN A HIGH-VOLTAGE ENVIRONMENT

Website: www.tinker-rasor.com Phone: (830) 253-5621 E-mail: info@tinker-rasor.com December 2025