

TINKER & RASOR

VOLTMETER CANE QUICK START GUIDE

Meter Install Steps

1. Attach the **Pop Socket** to the desired multimeter.
2. Place the meter on top of the Voltmeter Cane meter plate and lock the Pop Socket into place.
3. Adjust the Meter Plate Side Support brackets using the **Black Knob** located on the back of the Meter Plate as necessary.



MAX METER
WIDTH: 5 INCHES


Reference Electrode Install

1. Screw any 1/4-20 **Reference Electrode** into the bottom of Survey Cane



POP
SOCKET

BLACK KNOB

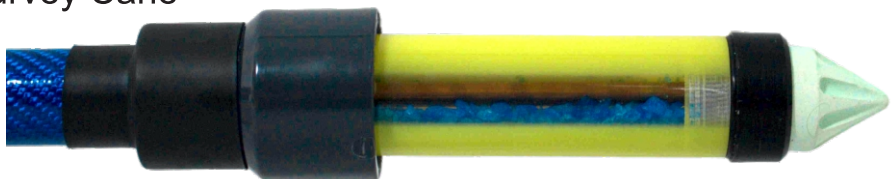

ANTI-SPIN
WASHER


CLAMP
WASHER



REEL DRAG



NEGATIVE METER
CONNECTION

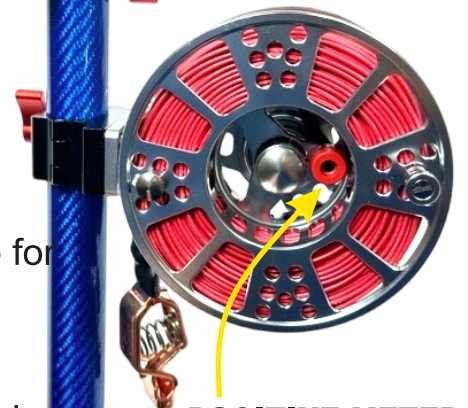

POSITIVE METER
CONNECTION

Handle & Reel Install

1. Loosen the clamp by unscrewing the red thumb screw.
2. Position the clamp around the blue carbon fiber tube.
3. Ensure the washer is placed on the outside of the clamp for proper alignment and secure fit.
4. Tighten the red thumb screw until the clamp is firmly secured to the tube.
5. Use the reel drag to adjust tension on the wire as needed.

CAUTION!

DO NOT USE THIS PRODUCT IN A HIGH-VOLTAGE ENVIRONMENT